



WINDOWS & DOORS

**FORGENT[®] SERIES
HALF SCREEN FIELD
INSTALLATION**

**READ THESE INSTRUCTIONS COMPLETELY BEFORE
STARTING ANY INSTALLATION**

⚠ CAUTION

Lead-based paint may be present in older homes, and the removal of windows & doors may cause this paint to be disturbed. In order to minimize exposure to lead-based paint dust, please consult www.epa.gov/lead for more information.

www.kolbewindows.com

Please read and follow the Installation Instructions completely before installing. If you have any questions about this or any of our products, please call your local Kolbe dealer.

PROPER INSTALLATION

Proper installation and maintenance of this product is essential to its performance. The following instructions are to be used as guidelines only. Kolbe recommends consulting a local Kolbe supplier or an experienced contractor, architect, or structural engineer since every installation is different. Installation of this mull is the sole responsibility of the architect, contractor, building owner, or consumer and Kolbe has no responsibility in this regard.

⚠ CAUTION

Lead-based paint may be present in older homes, and the removal of windows may cause this paint to be disturbed. In order to minimize exposure to lead-based paint dust, please consult www.epa.gov/lead for more information.

⚠ WARNING

Proper Eye and Hearing Protection must always be worn when installing, removing or performing adjustments to Kolbe window and door products.

IMPORTANT

Care must be taken to properly recycle or dispose of old materials. Any recyclable materials should be separated from non-recyclable or hazardous materials. Please consult with local or state authorities regarding proper disposal of non-recyclable or hazardous materials.

ITEMS REQUIRED BY INSTALLER

- Safety Glasses
- Rubber Hammer
- P2 Driver Bit
- Flat Screw Driver
- Rubber Hammer


INTRODUCTION

These instructions are for applying an exterior half screen to an existing Forgent double hung or sliding window.

STEP #1:


Open your half screen kit. Your kit should include the following:

- Two #6 x 1/2" stainless screws.
- One aluminum screen channel cut to length with clear screen grommets installed.
- One half screen.
- Two sash stops cut to length. (These parts are for a double hung unit only.)
- #7 x 3/4" screw (part # 1100000312)
- Black rubber bumper

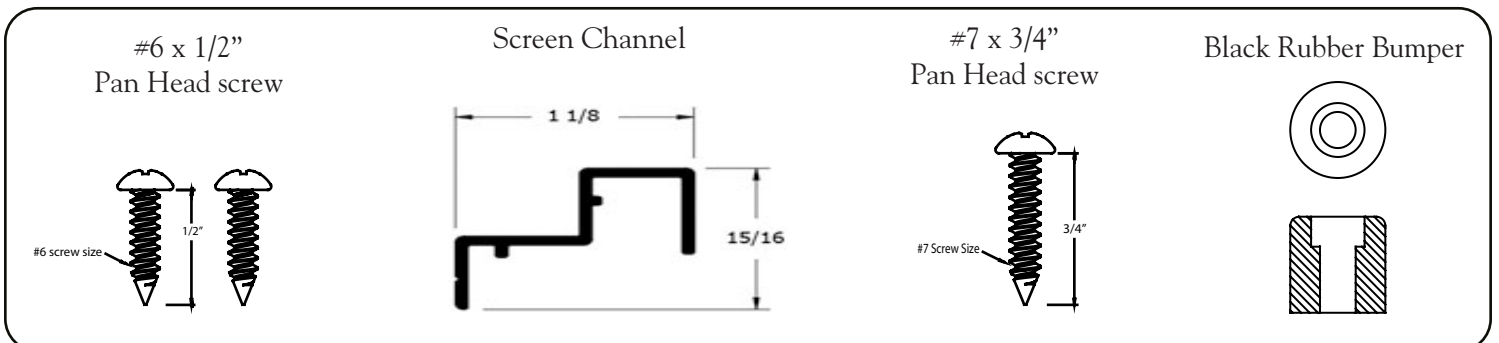

STEP #2: DOUBLE HUNG WINDOWS

See Fig. 1. Open the bottom sash and locate the two 3-7/8" long pvc sash stops at the sill and side jamb. Use the flat screw driver and pry out those stops.

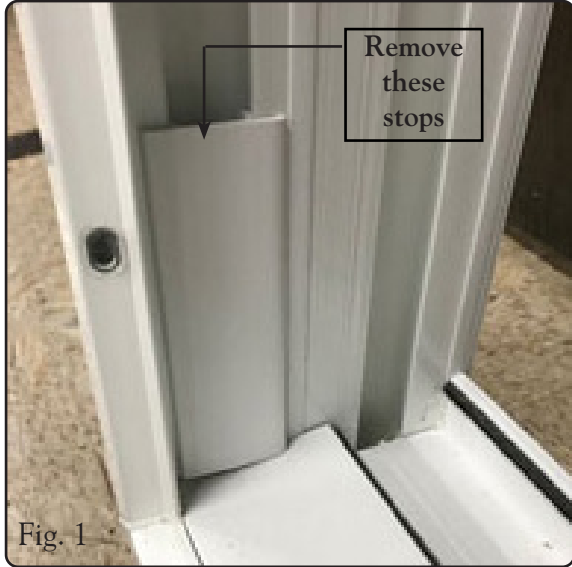

See Fig. 3, 4 & 5. For a half screen to work on a double hung window the top sash needs to be stationary and will not operate. Attach the black rubber stop under the balance shoe using provided #7 x 3/4" screw. Install the full-length sash stops in the exterior balance pocket. Use a rubber hammer to tap them in place. The stops should be tight to the bottom of the interlock on the exterior keeper sash and reach down to the slope sill.




STEP #3: DOUBLE HUNG & SLIDING WINDOWS

Fig. 6 & 7. Open the lock sash on the sliding window and remove the full screen. Check the length on the aluminum screen channel. The channel is cut and punched to fit a straight and square frame. If the frame is bowed in or out it will result in this aluminum piece to either not fit or have a gap on the ends.



Fig. 8 & 9. Screw the aluminum screen channel to the fixed sash using the screws provided in the kit.

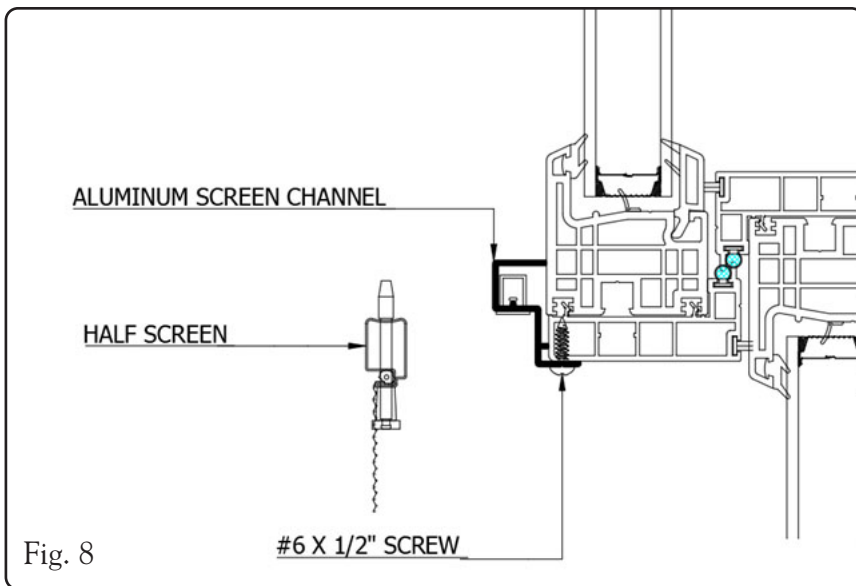

Install your new half screen.