

Fixed Immovable Sliding Door Trim Installation Instructions





A Phillips screwdriver is required.

A 6 mm Allen wrench for attaching the Handle is provided in the hardware package.

Use water and a soft cloth to clean. Do not use brass cleaner as it will remove the protective coating.

Note: Handles and backplates vary by style but application is the same.

1. Determine handing. Slide handles into backplates so square corners of the handle neck match up with notches in backplate. Insert screw from back side of plate into handle neck and firmly tighten down with the included 6 mm allen wrench.
2. Press a gasket onto the interior backplate. Push the backplate mounting lugs into the mounting holes.
3. Press a gasket onto the exterior backplate. Push the backplate mounting lugs into the mounting holes.
4. Loosely thread all 3 brass screws through the interior backplate and door and into the exterior backplate. Hand tighten all backplates screws.

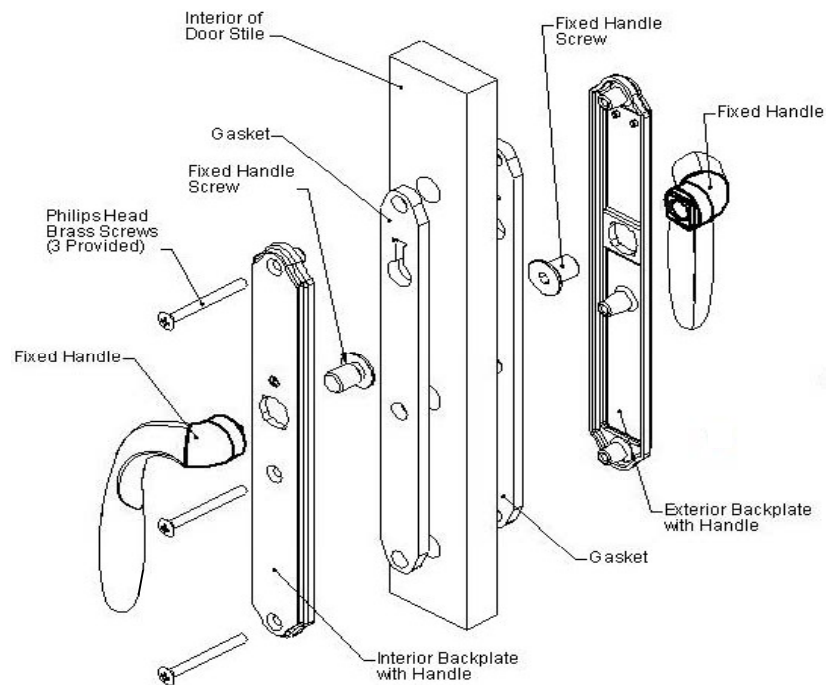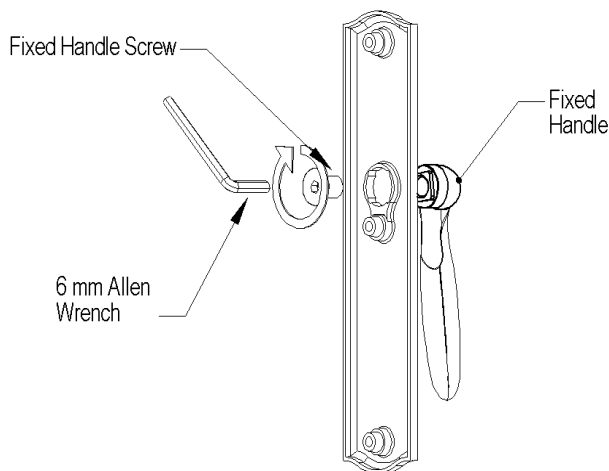

1-888-485-4885
www.us.hoppe.co